

Volkswagen Transporter T5 MY 2003>
Left Hand sliding door version
ZGB 7HB 017 231



Volkswagen Commercial vehicles

**Transporter T5 SWB & LWB MY
2003 >**

ZGB 7HB 017 231

Volkswagen Transporter T5 MY 2003>
Left Hand sliding door version
ZGB 7HB 017 231



Trim Removal

Trim removal ref to ELSA Volkswagen workshop information system.

Remove Driver seat
Double bench seat (if fitted)
Left hand upper seat belt anchor bolt.
Left hand upper "A" pillar trim.
Left hand lower "A" pillar trim.
Right hand upper seat belt anchor bolt.
Right hand upper "A" pillar trim.
Right hand lower "A" pillar trim.
Remove and discard both the cabin coat hooks.
Headliner trim strip

Pre-fitting

Check all components are in the box and no parts are missing.

The separation wall is fitted from the cargo side of the vehicle, **it will be necessary to have a second person assist in the lifting and positioning of the separation wall.**

NOTE: The separation wall is designed to fit on the vehicles floor, **any previously installed floor / internal wood lining kits may have to be trimmed to allow this to happen.**

Kit contents

X1 Separation wall
X1 Power tool bit
X15 Self drilling screws



Installation

Step 1.

With the assistance of an additional person lift the separation wall into the load area of the vehicle through the left hand sliding door aperture

See Fig1.



Step 2.

Position the separation wall on the vehicle floor (not on top of rubber floor).For vehicles with rear wooden floors some alterations to the flooring may be required, to allow the wall to sit correctly.


See fig2.



Step3.

Viewed from the vehicle cabin side, make sure the separation wall is positioned so it does not cover up the interior trim location clips(arrow) and is located evenly all round the vehicle frame.

See Fig 3.

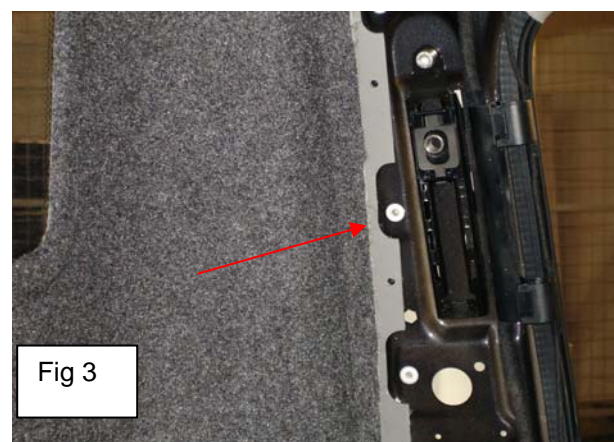




Step4.

Align the upper section of the separation wall with the headliner trim clips. Ensure the separation wall is evenly positioned before drilling fixation holes (arrows).


See Fig 4.

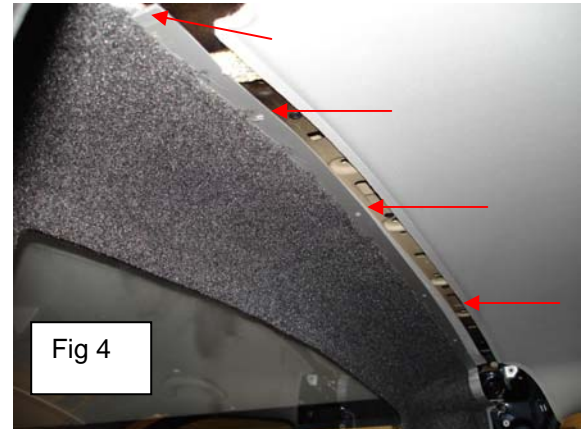

Step5.

With the separation wall now fully aligned.
Using a 2.5mm drill bit, set the drill bit in the drill chuck to protrude out 10 mm.
Starting at the centre of the top of the separation wall, drill and secure with the screw supplied. Continue to work around the separation wall drilling and fixing the wall with the remaining screws (arrows).

See Fig 4 & 5.

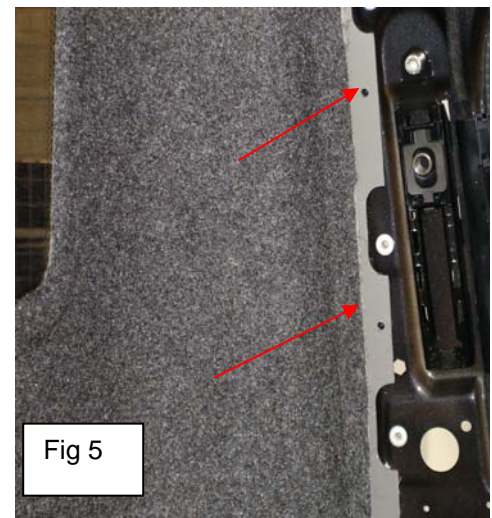

Step6.

Align the upper roof trim and secure back in place, refit all removed trims & seats according to ELSA work shop information system.

